


1


Press the reset button on the window. This is located in one of two places dependant on the window type, as below.

2

For sloping roof windows, push down on the lever to the right of the T-Bar and locate the reset button as shown:

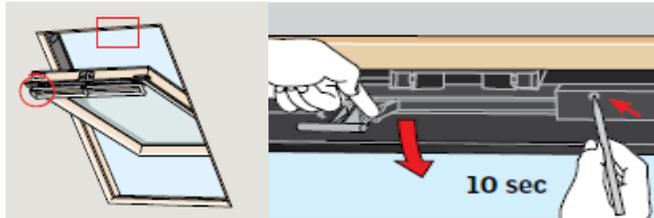

For flat roof windows, remove the cover cap on the window frame to locate the reset button as shown:

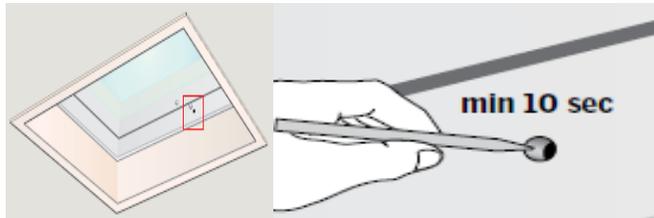

3

Press and hold the reset button for at least 15 seconds (ensure you continue to hold the button even when the chain moves)

Note: If you have other products installed these will also move up and down (e.g. blinds)

4

The chain will move in and out several times.

5

Once the product stops moving, close the window ensuring the vent bar is fully closed. For electric INTEGRA windows only, switch the power off to the window for at least 60 seconds.

Note: If there is more than one window, repeat the above steps for all windows.

6

Now, add the 'New' window to the wall switch or handset, as below.



Go to Step 7 - 8




Go to Step 9 - 16



Go to Step 17 - 24



7 Push the 'pair' button on the bottom of the wall switch for 1 second.

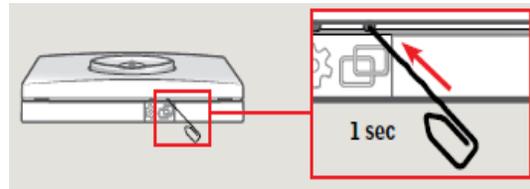

8 The wall switch is now ready to operate the windows.



9 Press the '+' symbol in the top right corner of the screen. Then tap 'New Product'.



10 Select 'Add New Products' and then tap the forward arrow on the next screen. The remote will now search for new products.




11 The 'New' product(s) will now be displayed on the screen. Tap the forward arrow to add them in to the remote.



12 The 'old' product now needs to be removed from the remote control.



13 Enter the main menu by tapping on the '+' icon, then select 'New product'

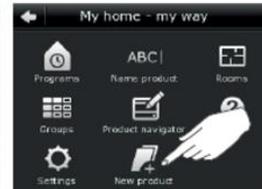

14 Select 'Delete products' and, if you know which product is to be deleted, tap on the name of the product



Note:

If you are unsure of the name of the product you wish to delete, tap on the image of each product on the left hand side of the list. This will cause the product to move a small amount momentarily.



15

The handset will ask you to confirm if you wish to delete the product. Select yes when you have identified the correct product to delete.


16

The handset will now be able to operate the products.

17



On the handset, select 'Menu'

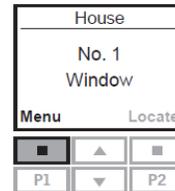


18

Then select 'System Settings' and then select 'Register New Product'.

19

The remote will now search for the window that was reset, along with any other products.

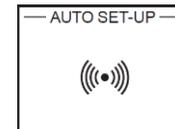

20

The message 'New Products Registered' will be displayed briefly.



21

The handset will then advise that there is no contact with a number of products.

Note:

This is the window, blind etc. that you removed when you reset the window.

22

Choose 'List' when possible.

23

You will be asked if you want to keep each product. Select 'No' for each product you wish to remove from the handset.

Note:

If you press 'Yes' by accident, go back to Step 15. The handset will not find any new products in Step 17.

24

The handset is now ready to operate the products.

